
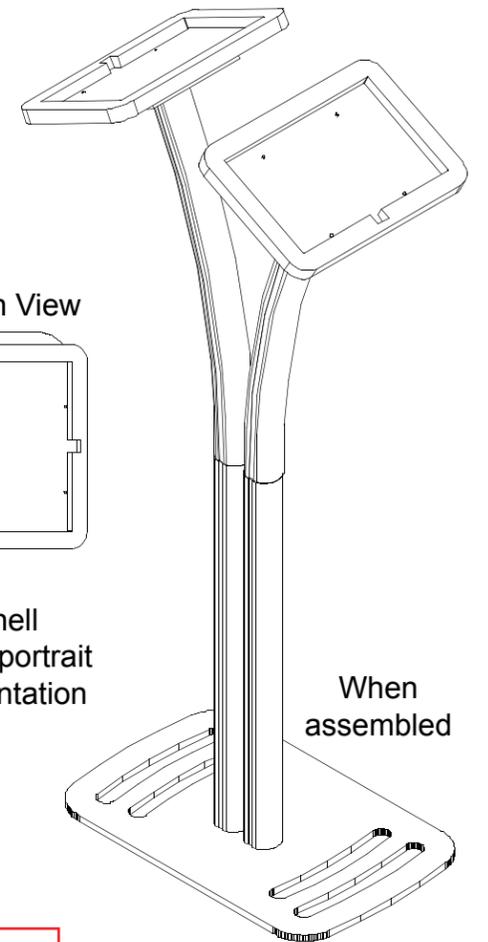
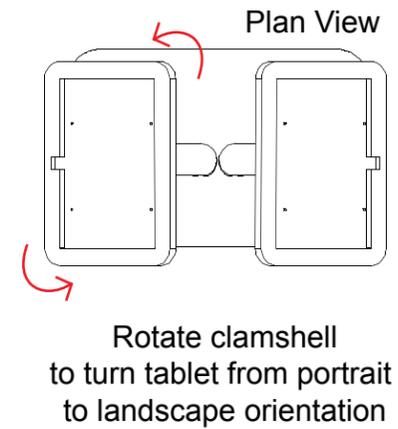


Steps:

- 1) Attach base [1] to curved verticals [2,3] using bolts.
- 2) Attach square plates [4] to verticals [2,3] using bolts.
- 3) Attach clamshells [5] to square plates [4] using hex nuts.
- 4) Insert tablet and feed wire through holes as shown in detail.

NOTE: Square plate [4] must rotate to left and right before installing clamshell.

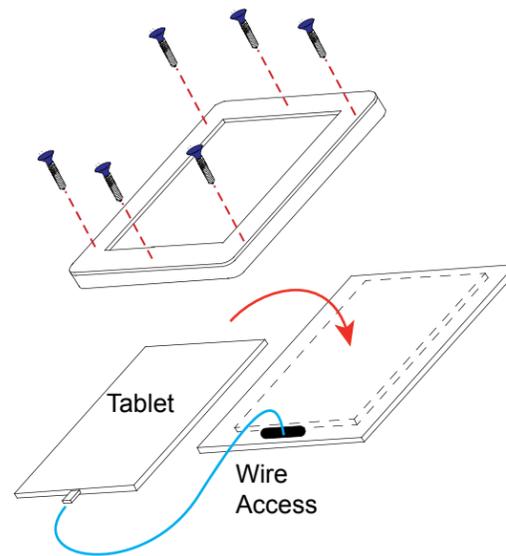


Wire Management for iPad



Feed tablet charging cord through holes from top to bottom of post as shown.

Optional Cover for Home Button

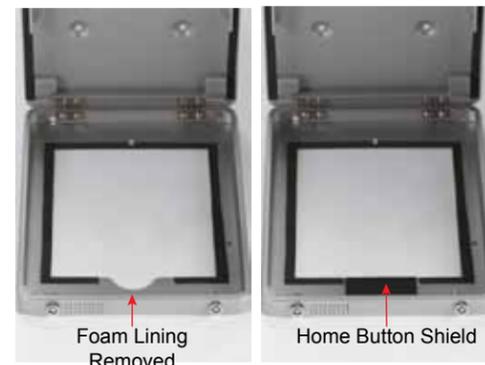

- 1) Remove foam lining from inside bottom of clamshell as shown.
 - 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.
- NOTE:** This is a permanent fix and can't be easily removed.

Tools Required:
1) Hex Tool
2) Pliers



WHEN DISASSEMBLING, TIGHTEN ALL SCREWS AND NUTS TO PREVENT LOSS DURING SHIPPING.