


Top View

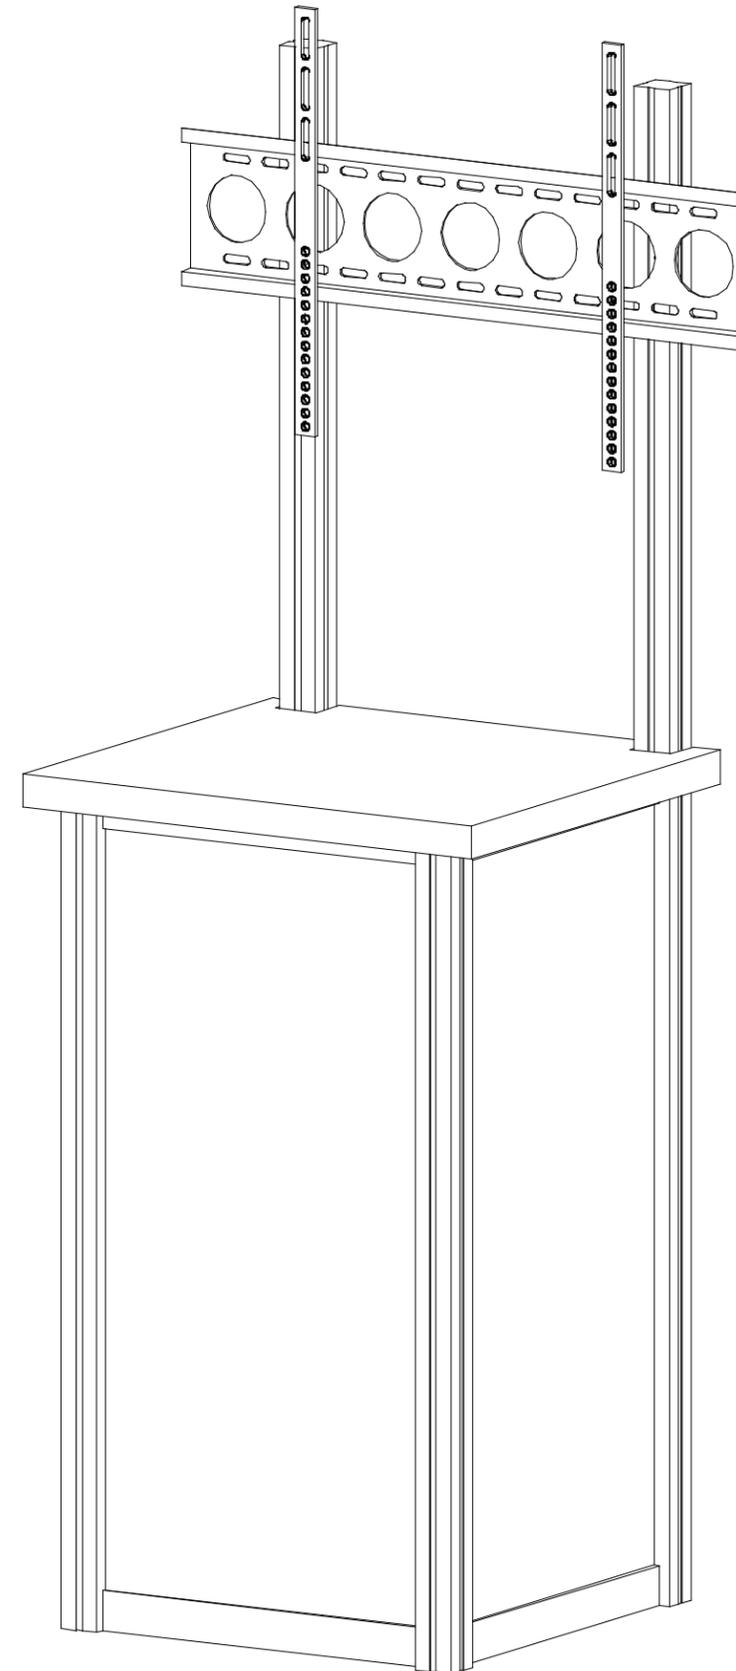

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

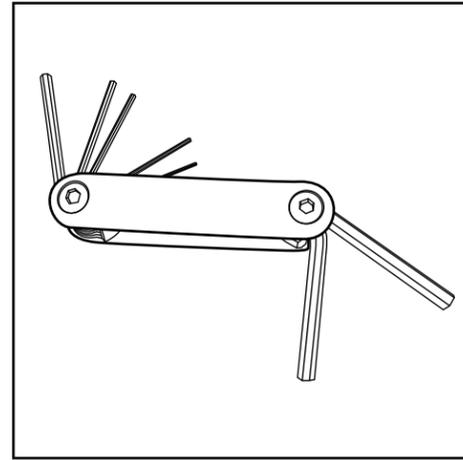


Hex Tool - Essential for Assembly

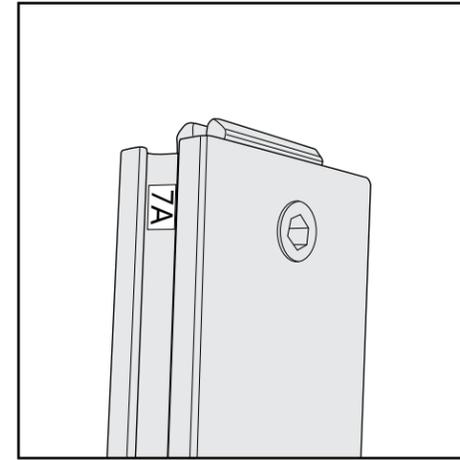


Part Identification - Numbering

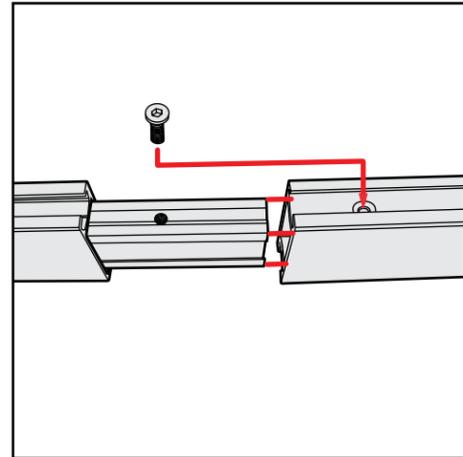


Spline Connection

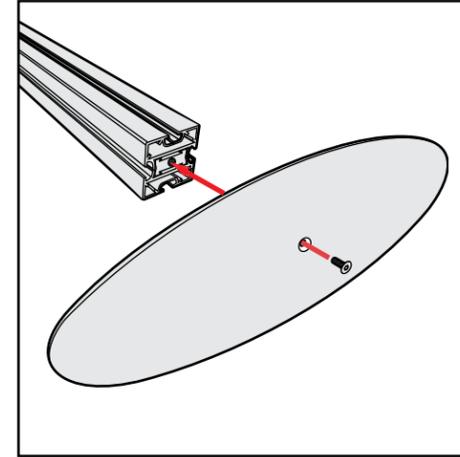

Base Plate & Extrusion Connection

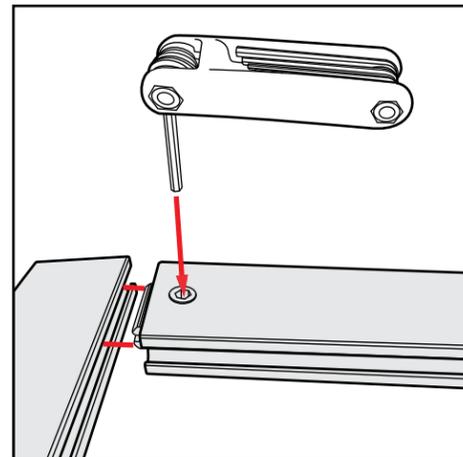

Extrusion & Lock Connection

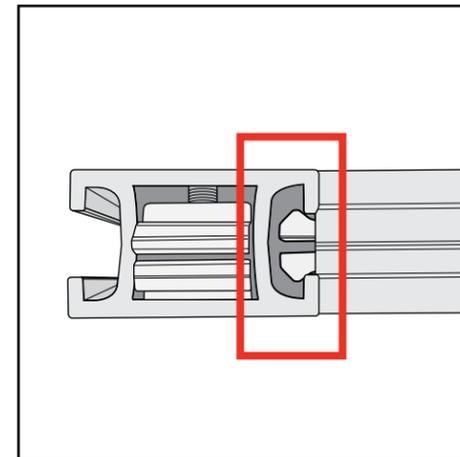

Engaged Lock



WARNING



DO NOT USE POWER TOOLS




LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


Top View of Each Level

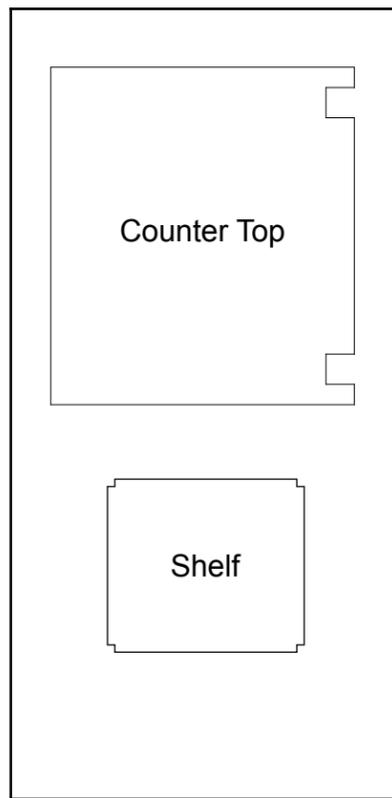


Level 1 (Lower Level)

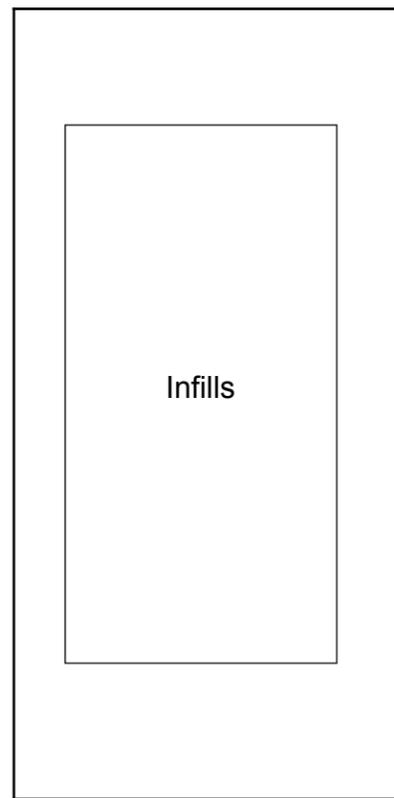


Level 2

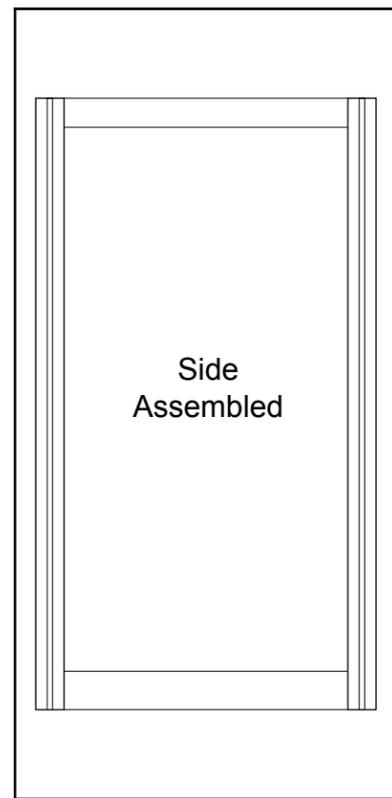


Level 3

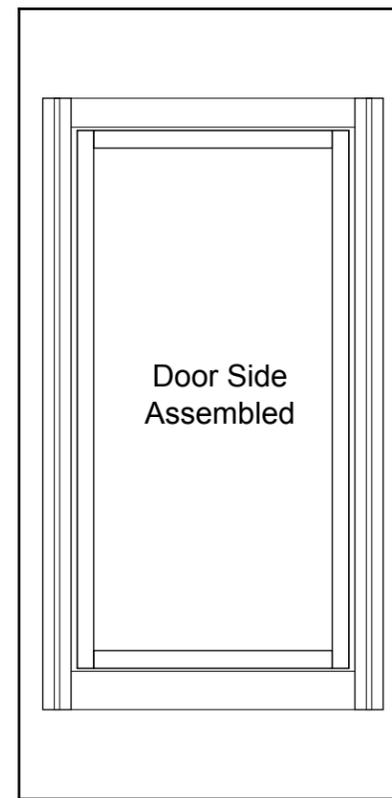

Level 4

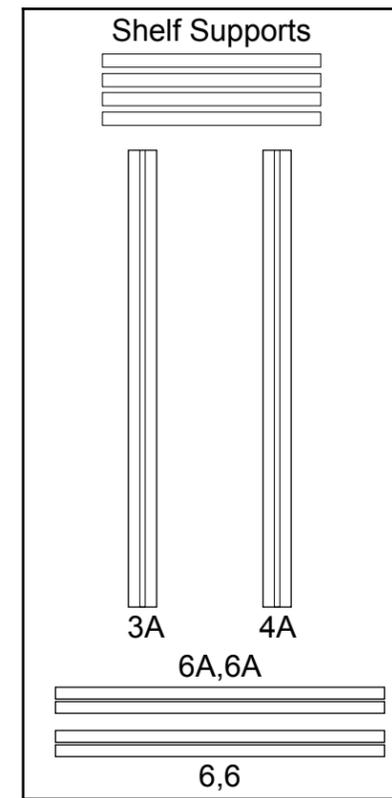



Level 5

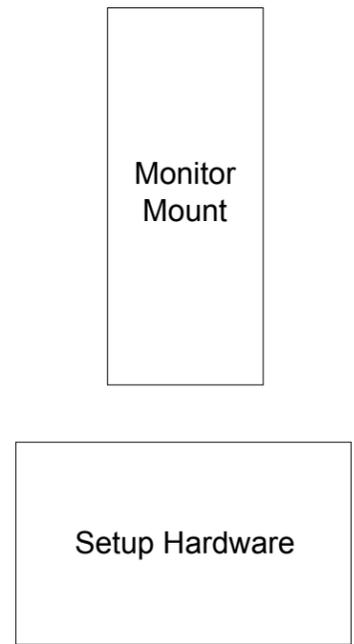


Item	Qty.	Description
1	1	37.5" Vertical Extrusion
2	1	37.5" Vertical Extrusion
3	1	37.875" Vertical Extrusion
3A	1	22.125" Vertical Extrusion
4	1	37.875" Vertical Extrusion
4A	1	22.125" Vertical Extrusion
5,5A	2,2	16.378" Horizontal Extrusion
6,6A	2,2	16.378" Horizontal Extrusion

Steps:

- 1) Attach verticals [4] to [4A] and [3] to [3A], using connectors. See Connector detail.
- 2) Attach horizontals [5] and [6] between verticals [1] [2] [3] [3/3A] and [4/4A].
- 3) Slide infills between verticals [1 & 2] [1 & 4] and [2 & 3], then secure with horizontals [5A] and [6A] on top.
- 4) Attach assembled door to vertical [4]. See [Door Attachment](#) detail.

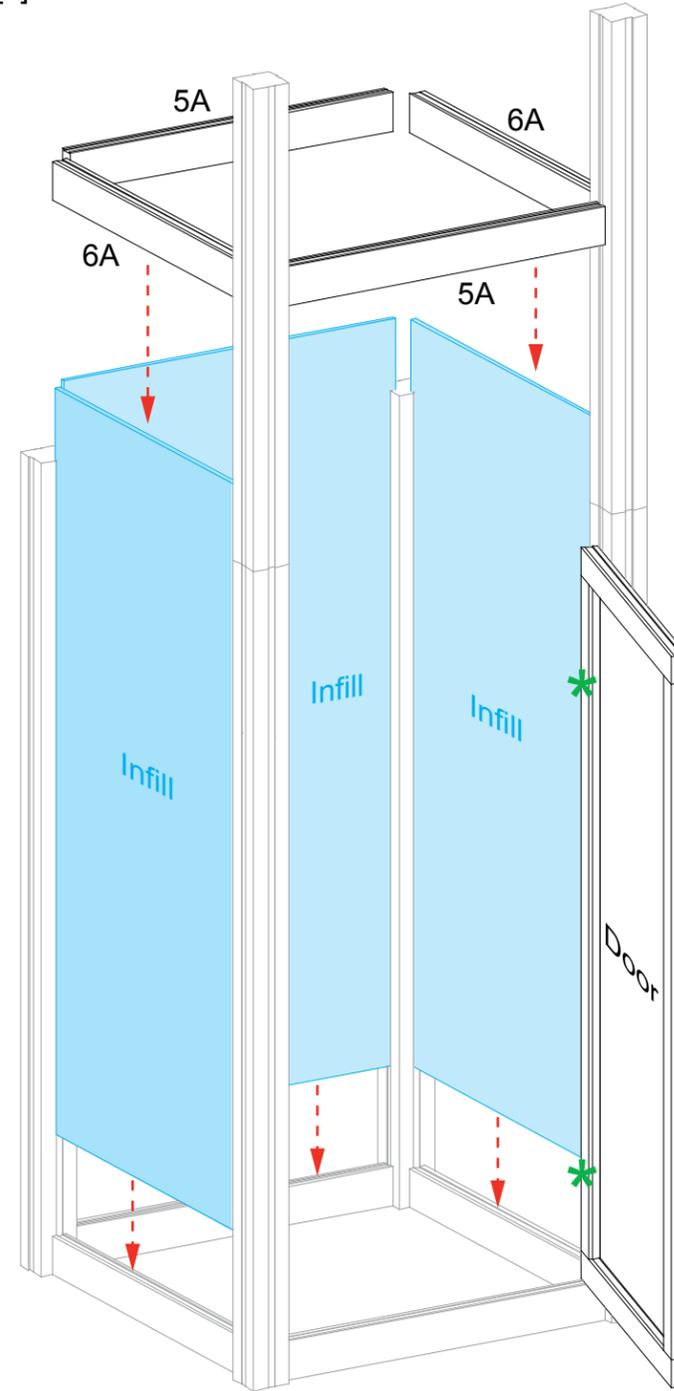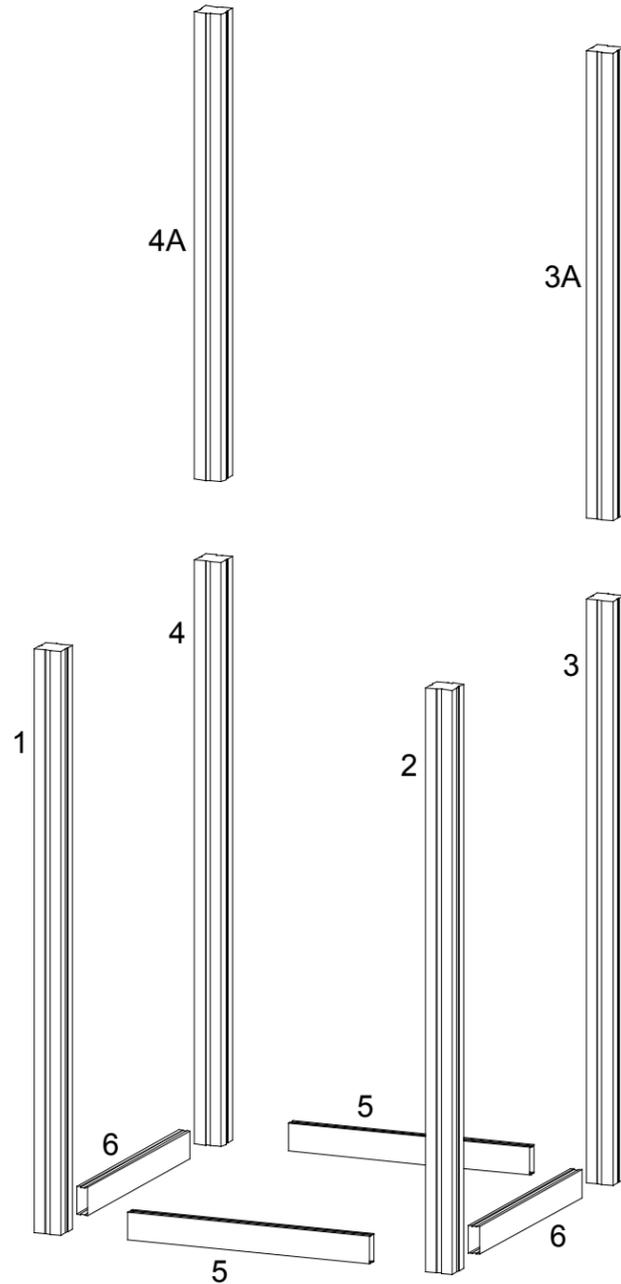

BACK VIEW



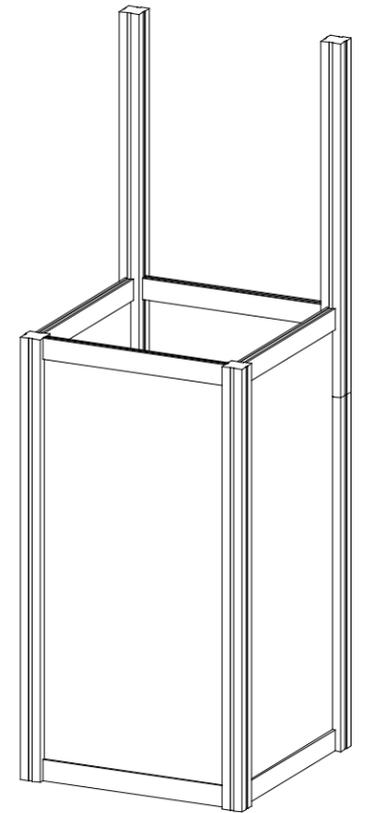


Partial Completed Assembly



Steps:

- 1) Attach shelf supports to interior side of infills, using Velcro, then place internal shelf on top.
- 2) Set counter top onto assembled base. See [Counter Top Attachment](#) detail.
- 3) Install monitor mount to verticals [3A] & [4A]. See [Monitor Mount Attachment](#) detail.

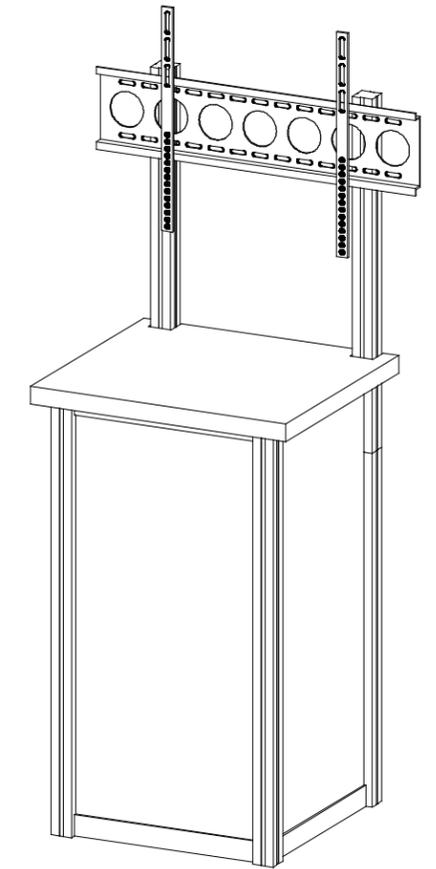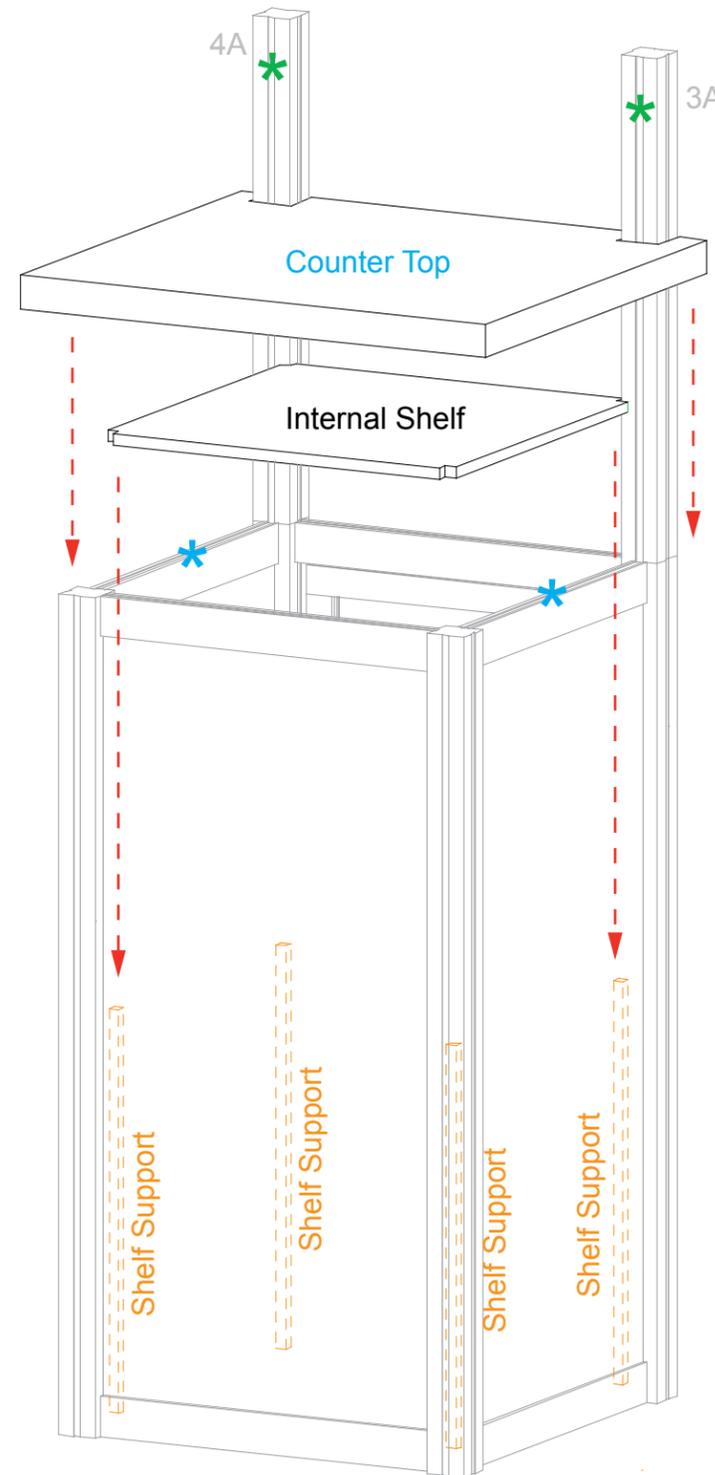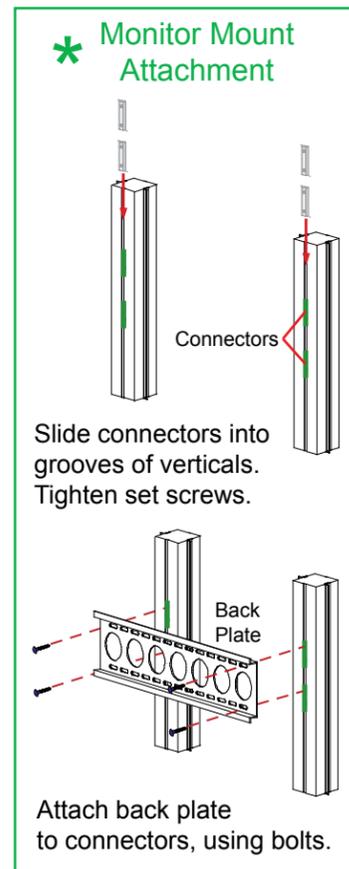

Completed Assembly

